


WheelieTow™

Instructions

The WheelieTow Bracket and Double WheelieTow Bracket are made from 15% Glass filled PA66 Nylon for extra strength. With securing caps made from TPE 20% Polypropylene. Suitable for all types of road surfaces.

Wheelie Bin Towing Bracket

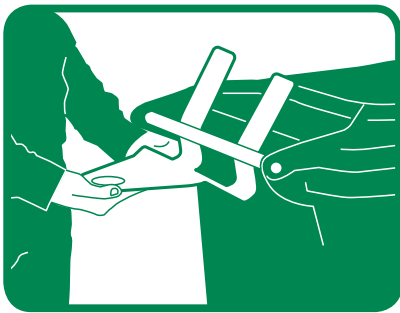

1 Attach the WheelieTow to bin.




2 Attach bin with WheelieTow over tow ball.




3 Proceed slowly, at no more than 20 kph. Do not reverse with bin attached.


Double Wheelie Bin Towing Bracket

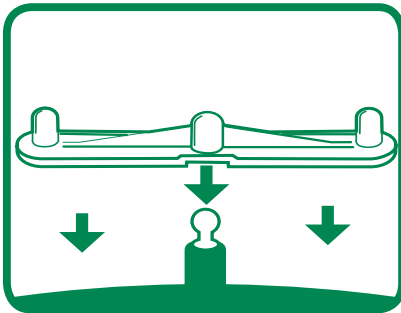


1 Attach WheelieTow Double Bracket over Tow ball

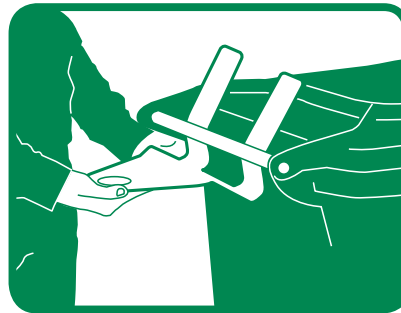

2 Attach a WheelieTow to each bin.

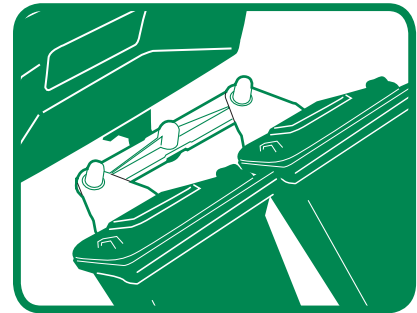

3 Attach bins with WheelieTows to Double Bracket.

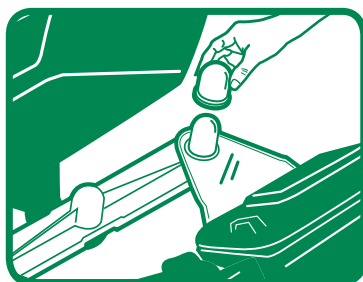

4 Attach securing caps on top for rough road usage.




5 Proceed slowly, at no more than 20 kph. Do not reverse with bin attached.

WheelieTow™


Securing Caps for rough road usage

Securing caps provided to secure bins over rough roads.

- 1** Attach WheelieTows on Double Bracket with bins attached.

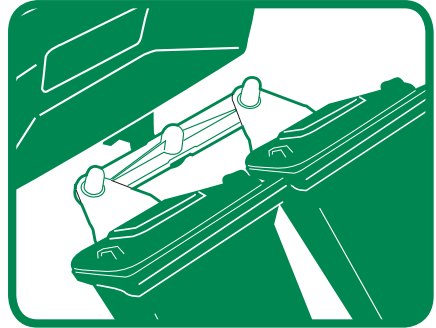

- 2** Attach securing caps on top of each WheelieTow.

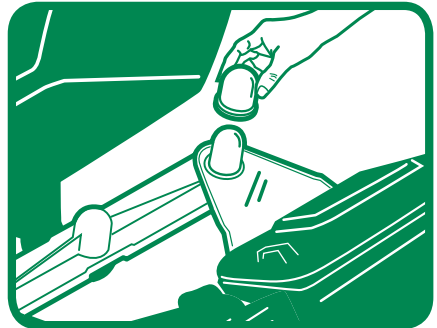

- 3** Make sure securing caps are firmly pressed on.

